

目 录

Product Overview

产品概述

Technical Parameters

技术参数

Hardware Link

硬件连接

Quick Use

快速使用

How to Drive Personal Vehicles with a Steering Whe

如何使用方向盘、手柄、RC遥控器驾驶个人车辆

How to Drive a Shared Vehicle

如何驾驶共享车辆

Advanced Configuration Management

高级配置管理

Others

如何使用本设备接入Mission Planner远程控制航模

Product Overview

CloudRC GAMEBOX



With the CloudRC GAMEBOX you can connect the steering wheel and an external HDMI monitor. Hook up the CloudRC AdvenX3 and start driving your RCCAR.

产品概述

CloudRC GAMEBOX



With the CloudRC GAMEBOX you can connect the steering wheel and an external HDMI monitor. Hook up the CloudRC AdvenX3 and start driving your RCCAR.

Technical Parameters

Technical Parameters

Brand	CloudRC GAMEBOX	Model	X96
Video Interface	HDMI	Function	Dual-Band Wi-Fi Bluetooth
Output Resolution	1920X1080	Additional Features	Wireless Wi-Fi Bluetooth
Interface Type	Ethernet Wi-Fi Fiber Optic USB	Memory	4GB/32GB
Size	105X05x20 (mm)	Weight	0.5KG

 
 
技术参数

技术参数

品牌	CloudRC GAMEBOX	型号	X96
视频接口	HDMI	功能	双频 Wi-Fi 蓝牙
输出分辨率	1920X1080	附加功能	无线 Wi-Fi 蓝牙
接口类型	以太网 Wi-Fi 光钎 USB	内存	4GB/32GB
尺寸	105X05x20 (mm)	重量	0.5KG



Hardware Link

Hardware Link

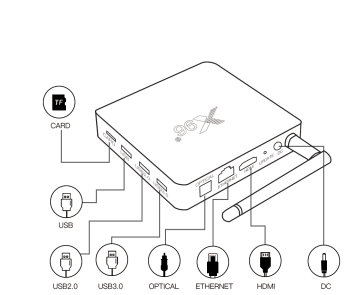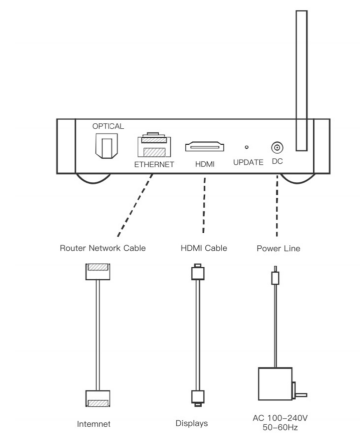


硬件连接

  硬件链接

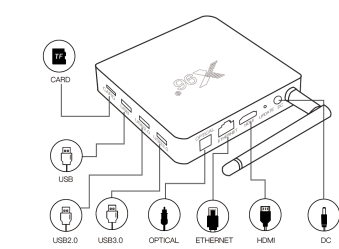
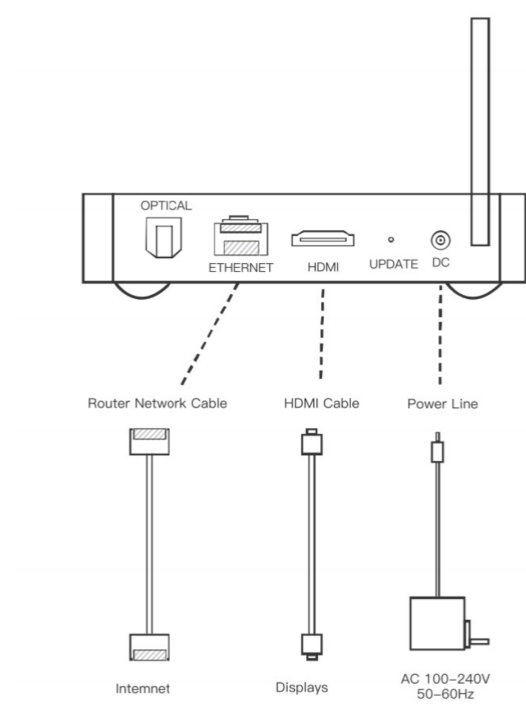


Quick Use

 
1. Download the CloudRC APP from the Google Play Store or Apple App Store.
2. Log in or register for a CloudRC APP account and then log in.

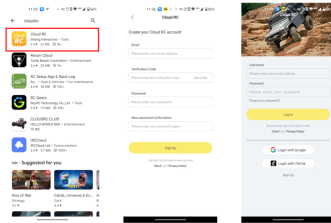

  3. Open the CloudRC app, tap the scan button under "My" -- "Game Box", click on the scan in the top right corner, go to the GAMEBOX interface to scan the QR code to bind the vehicle.

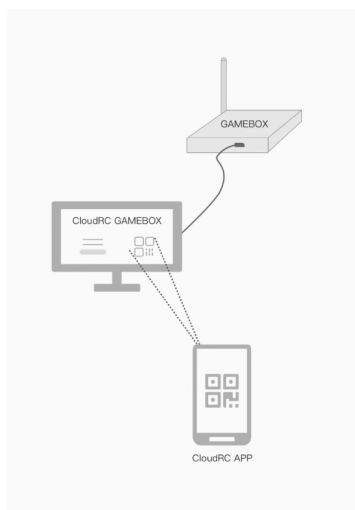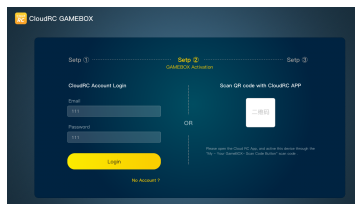


 4. After binding, the bound vehicle will be displayed on the GAMEBOX interface. Select the driving mode and start driving.


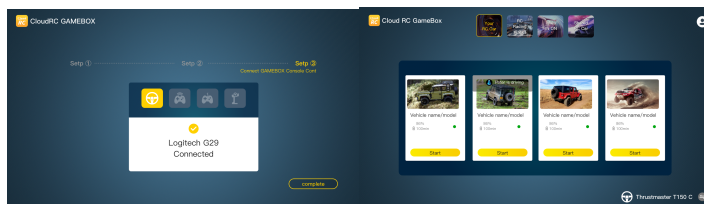


快速使用

 
- 1、从谷歌下载CloudRC APP Play商店或苹果应用商店
- 2、登录或者注册CloudRC APP账号，并登录

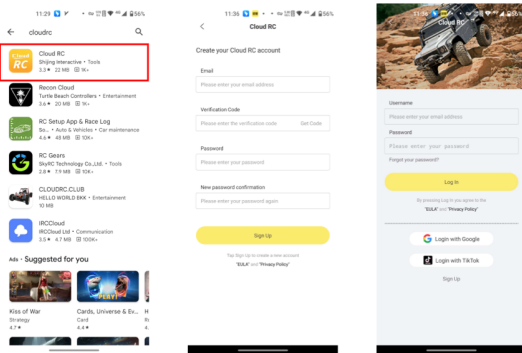

  - 3、打开CloudRC移应用程序，单击扫描按钮我的- 游戏盒子，点击右上角扫描，去GAMEBOX界面扫描二维码绑定车辆

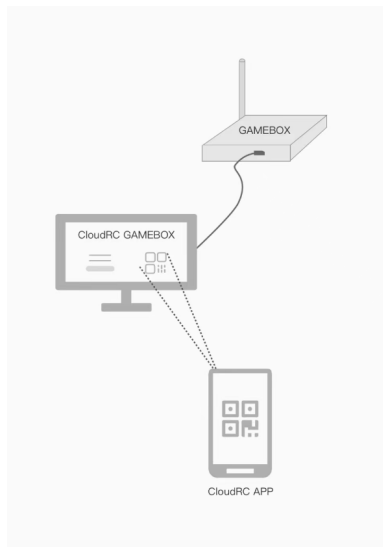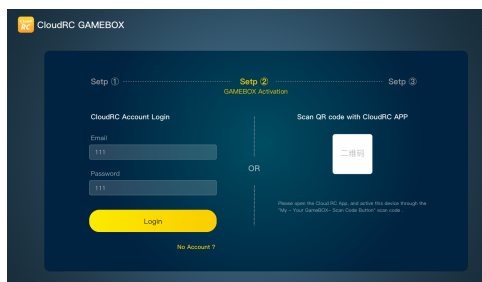

- 4、绑定后，在GAMEBOX界面显示所绑定车辆，选择驾驶方式，开始驾驶即可

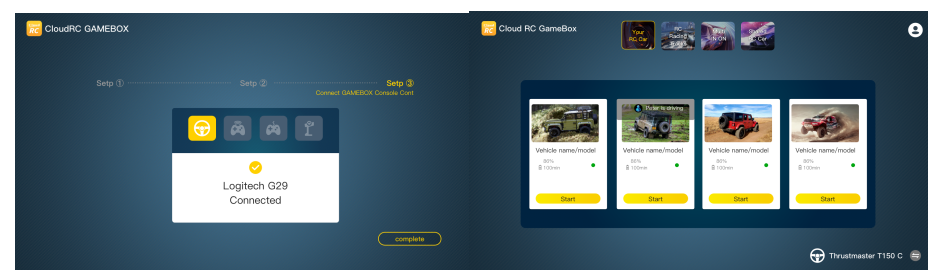 


How to Drive Personal Vehicles with a Steering Whe

Steering Wheel Connected Driving



Connect the steering wheel to the USB port, the monitor to the HDMI port, and the power supply to the DC connector.

 After the connection is complete, refer to the quick start guide, scan the code to bind the vehicle, and select steering wheel driving.

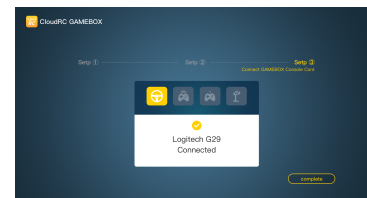


Connecting Wired and Bluetooth Controllers for Driving

Wired controller connection: Connect to the USB port, monitor to the HDMI port, and power supply to the DC connector.



 After the connection is complete, refer to the quick start guide, scan the code to bind the vehicle, and select controller driving.

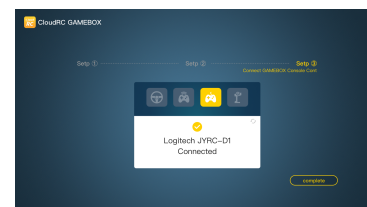


Wireless Bluetooth Controller Connection: Follow the Bluetooth controller manual to turn on Bluetooth, connect the monitor to the HDMI port, and the power supply to the DC connector.

How to Drive Personal Vehicles with a Steering Whe




 
After the connection is complete, refer to the quick start guide, scan the code to bind the vehicle, and select Bluetooth controller driving.

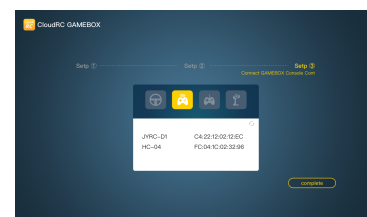


RC remote control connection driving

Connect the monitor to HD, and the power supply to DC.

  Connect the signal board, battery, and RC remote signal converter as shown in the diagram below, then turn on the battery switch to connect the RC remote control.

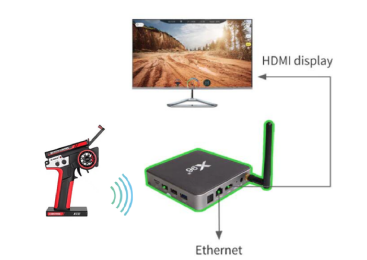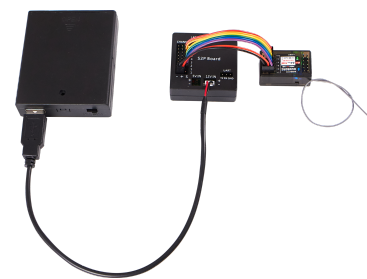

 After the connection is complete, refer to the quick start guide, scan the code to bind the vehicle, and select Bluetooth controller driving.

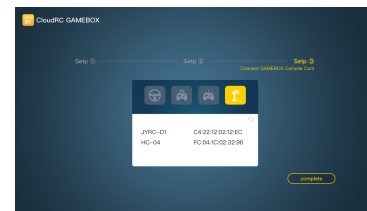


如何使用方向盘、手柄、RC遥控器驾驶个人车辆

方向盘连接驾驶



方向盘连接USB 插口，显示器连接HD，电源 DC

 连接完毕后参考快速使用流程，扫码绑定车辆，选择方向盘驾驶

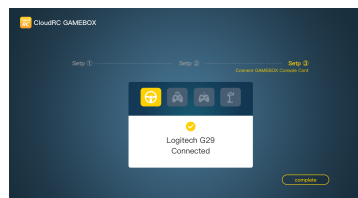


有线手柄和蓝牙手柄连接驾驶

有线手柄连接：连接USB 插口，显示器连接HD，电源 DC



 连接完毕后参考快速使用流程，扫码绑定车辆，选择手柄驾驶

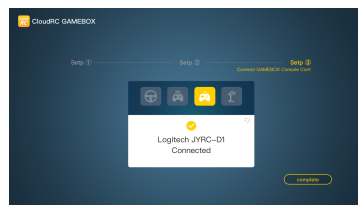


无线蓝牙手柄连接：根据蓝牙手柄说明书，打开蓝牙，连接显示器连接HD，电源 DC

如何使用方向盘、手柄、RC遥控器驾驶个人车辆



 
连接完毕后参考快速使用流程，扫码绑定车辆，选择蓝牙手柄驾驶

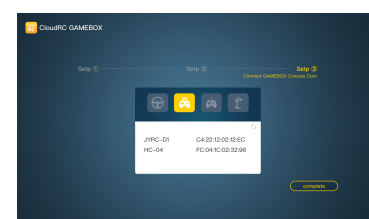

RC 遥控器连接驾驶


连接显示器连接HD，电源 DC

 按下图连接信号板，电池和RC遥控信号转换器，打开电池开关，即可连接 RC 遥控器

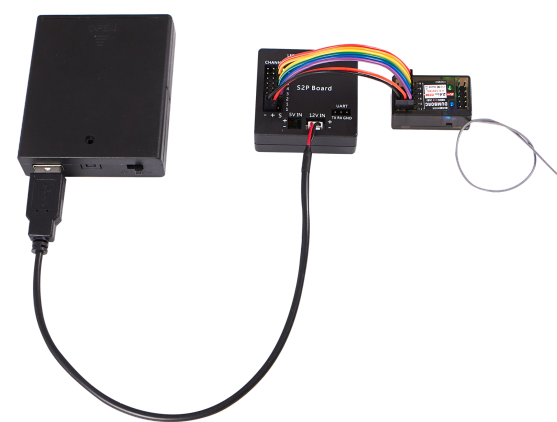


连接完毕后参考快速使用流程，扫码绑定车辆，选择蓝牙手柄驾驶

 如何使用方向盘、手柄、RC遥控器驾驶个人车辆


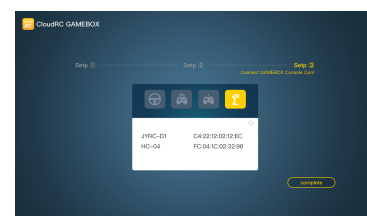


How to Drive a Shared Vehicle

 
1. Download the CloudRC APP from the Google Play Store or Apple App Store.
2. Log in to your CloudRC APP account or register a new one and then log in.

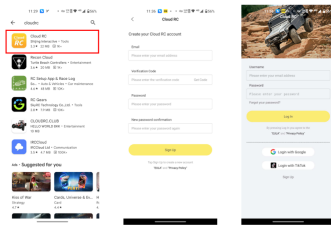

  3. Open the CloudRC mobile application, tap the scan button under "My" -- "Game Box", and then click on the scan button in the top right corner to go to the GAMEBOX interface and scan the QR code to bind the vehicle.

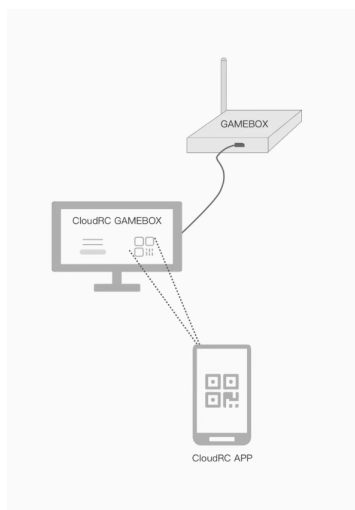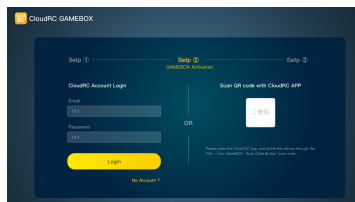


 4. After binding, the shared vehicle will be displayed on the GAMEBOX interface under RC Racing Tracks. Select the shared vehicle - pay - queue (there is a fee for driving; if your account balance is sufficient, the corresponding amount will be deducted directly). Once the queue is finished, click Start to begin driving.


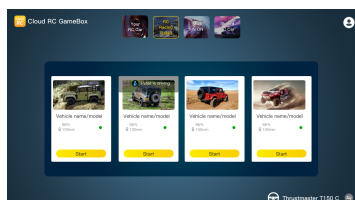


如何驾驶共享车辆

 - 1、从谷歌下载CloudRC APP Play商店或苹果应用商店
- 2、登录或者注册CloudRC APP账号，并登录

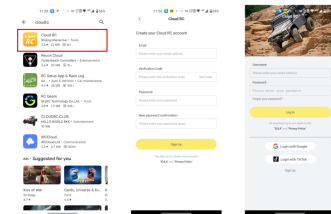


  - 3、打开CloudRC移应用程序，单击扫描按钮我的-- 游戏盒子，点击右上角扫描，去GAMEBOX界面扫描二维码绑定车辆

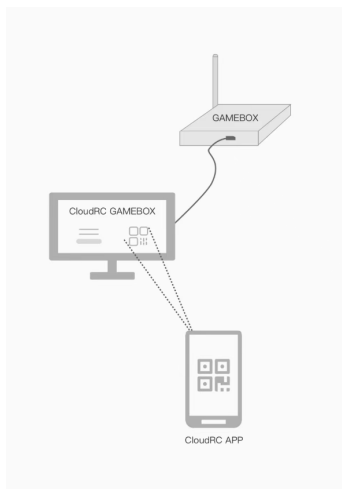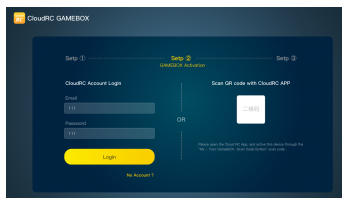

- 4、绑定后，在GAMEBOX界面RC Racing Tracks显示共享车辆

 
选择共享车辆-付费-排队（需付费驾驶，若账户余额充足，直接扣除相应金额，）排队完成点击 Start开始驾驶

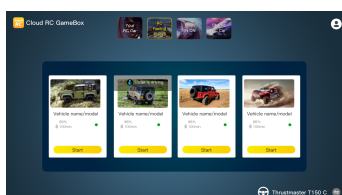


Advanced Configuration Management

Tap the settings in the top right corner of the driving interface to enter the Advanced Configuration Management interface.

 
Steering Wheel Driving

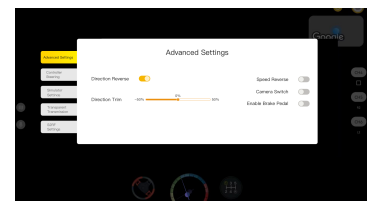


Controller Driving

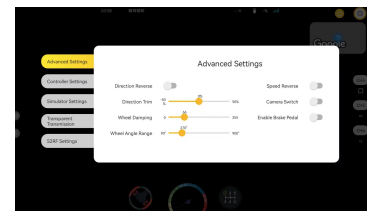 

Controller Settings

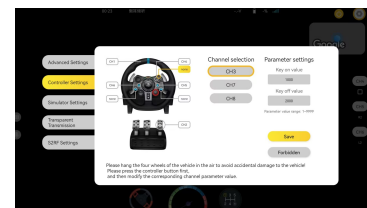 


Motion Simulator Settings

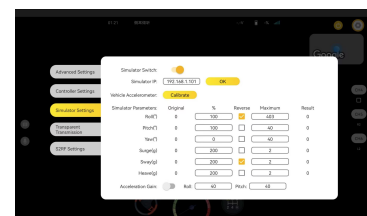 


Data Passthrough Settings

 Advanced Configuration Management

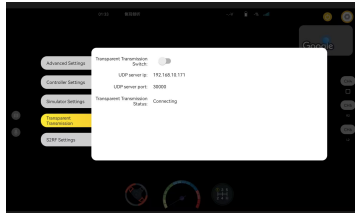

S2RF Settings

 
Pairing: Bluetooth remote control pairing time, countdown 5S.

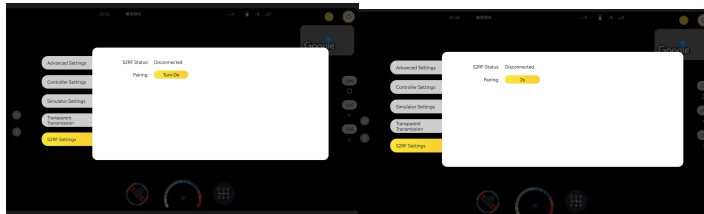


高级配置管理

驾驶界面点击右上角设置-进入高级配置管理界面

 
方向盘驾驶

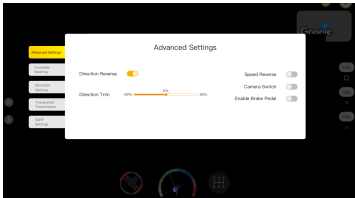


手柄驾驶

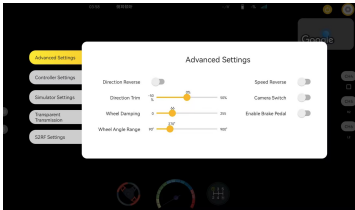 

控制器设置

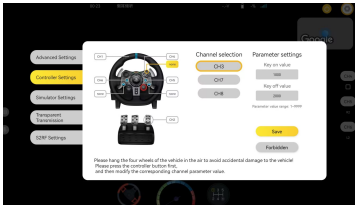 


运动模拟器设置

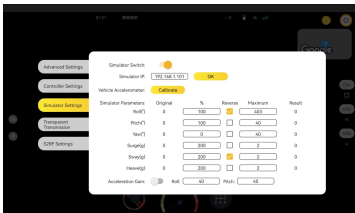 


数据透传设置

 高级配置管理

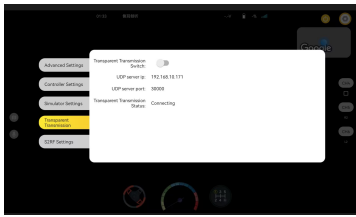

S2RF设置

 Pairing:蓝牙遥控器配对时间，倒计时 5S

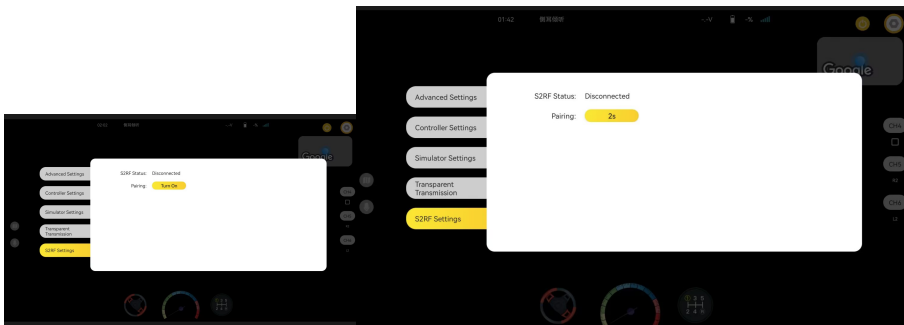

Others

Others

如何使用本设备接入Mission Planner远程控制航模